MADRID TILT SS2205

1. 110mmH x 42.4mm W x 3mm Thick HDPE packer // Fit between wall/beam and back plate if uneven vertical surface. Stackable packer
2. M4 screw SS316 // Crimp earthing wire to spigot (if required) through dedicated earth wire hole
3. 102.5mmH x 43mm W SS2205 rear plate // Affixes to vertical surface
4. M12 nut & washers SS304 (also supplied with 93mm long lag screws x 2 in kit) // Generally used for timber beam/joist installations
5. M18 nut & washers SS304 (also supplied with 120mm long M18 rod in kit) // Generally used for concrete installations
6. 131mmH x 50mmW x 65mmD SS2205 spigot front // Attaches to rear plate
7. M8 pointed grub screw SS316 // Adjust angle of front spigot and lock off position
8. 102.5mmH x 47.5mmW SS2205 friction plate (with 1mm HDPE preglued packer) // Clamping plate to hold 12mm toughened glass in position
9. M8 grub screw SS316 // Tightens clamping plate against toughened glass
10. 108mmH x 42mmW x 1.5mm D SS316 plate (with countersunk M4 screw)// Slide in stainless steel plate to hide fixings once installed

Install note: To ensure plate can slide in, spigot must have 70mm or more gap from floor/ground

11. M8 x 25mm countersunk screws SS316 x 2 // Attaches spigot front to rear plate

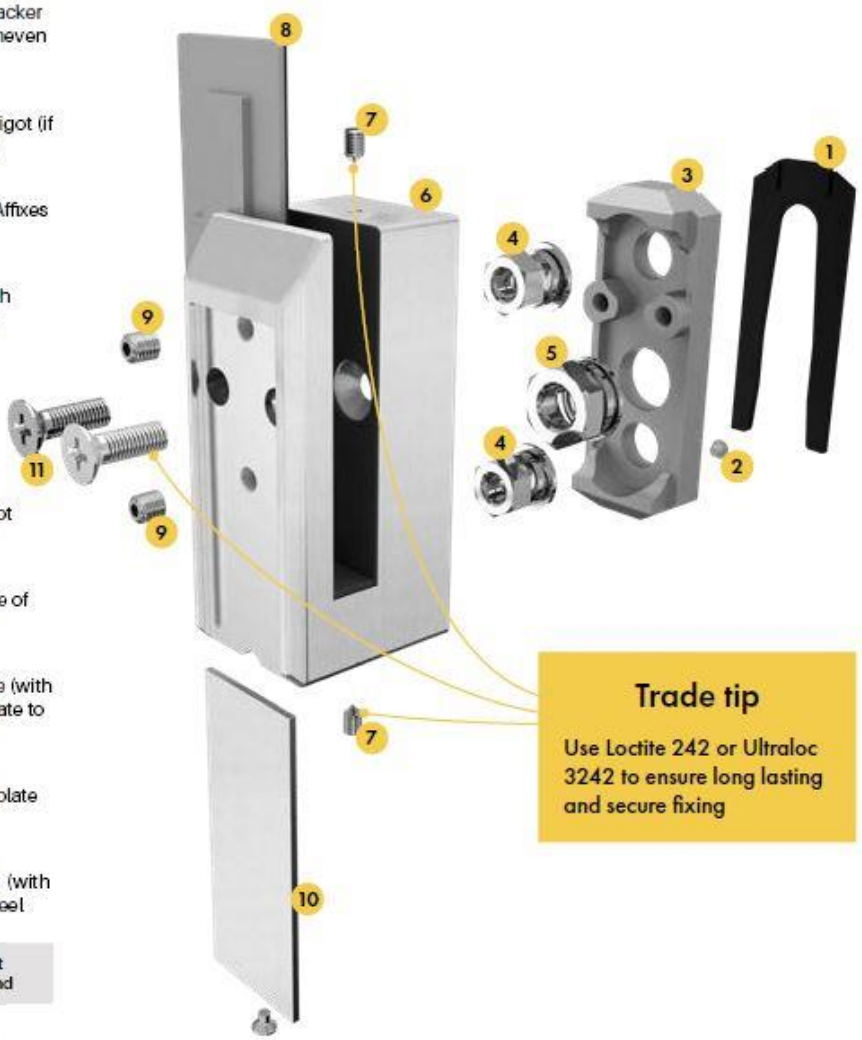

Trade tip

Use Loctite 242 or Ultraloc 3242 to ensure long lasting and secure fixing

MADRID TILT INSTALL TIPS

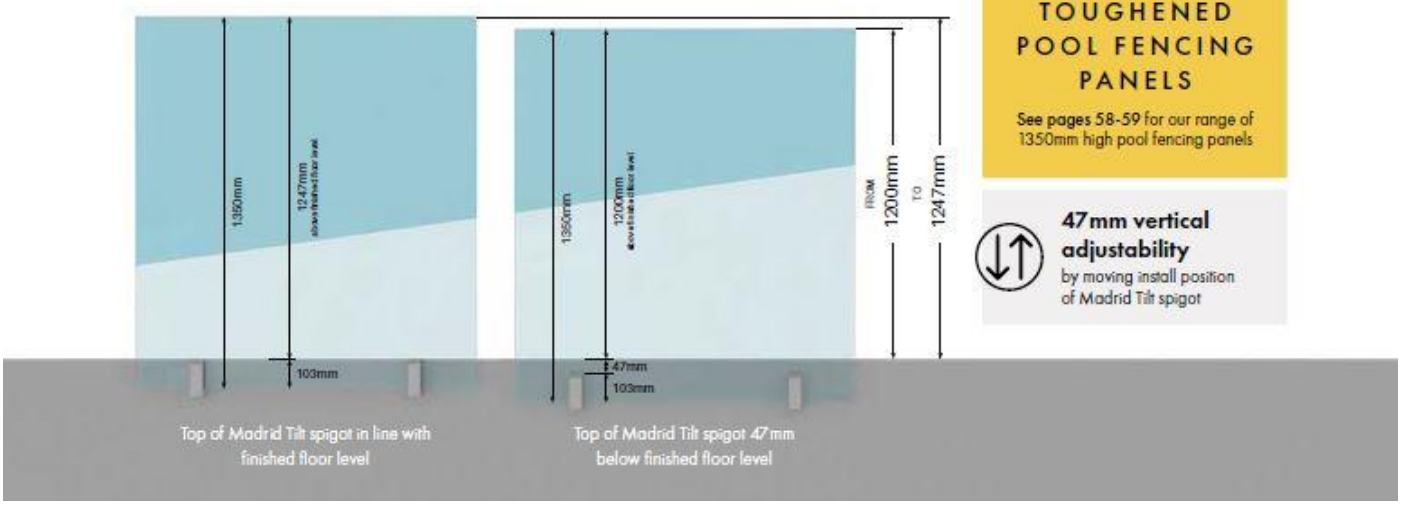

Top of Madrid Tilt spigot in line with finished floor level

Top of Madrid Tilt spigot 47mm below finished floor level

USING 1350MM HIGH CLEAR TOUGHENED POOL FENCING PANELS

See pages 58-59 for our range of 1350mm high pool fencing panels

47mm vertical adjustability
by moving install position of Madrid Tilt spigot