EASY CLAMP INSTALL GUIDE

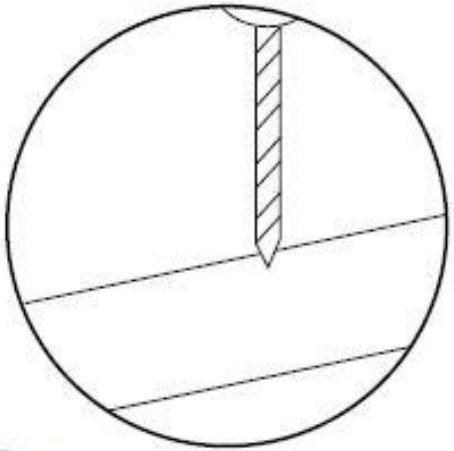

1 DRILL HOLE IN POST
MARK OUT & DRILL HOLES TO SUIT DIAMETER OF BLIND RIVET NUT

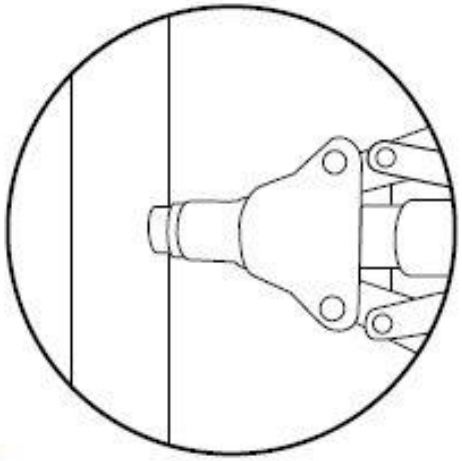

2 INSTALL THE BLIND RIVET NUT
USING THE RIVET HAND TOOL

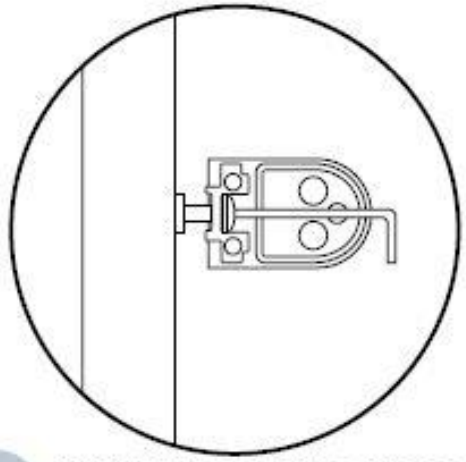

3 INSTALL THE D CLAMP ONTO POST
SCREW THE CAP HEAD SCREW INTO THE BLIND RIVET NUT THROUGH THE D CLAMP

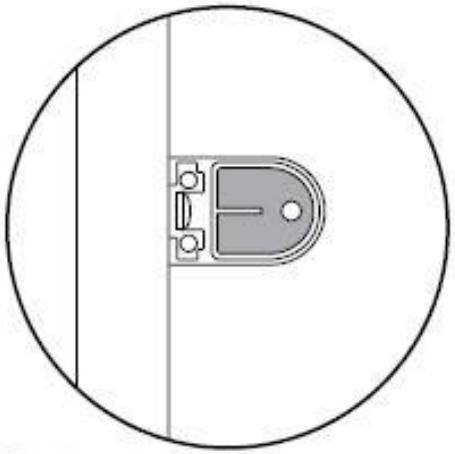

4 PLACE RUBBER GASKETS
PLACE THE CORRECT RUBBER GASKETS ONTO BOTH HALVES OF THE D CLAMP

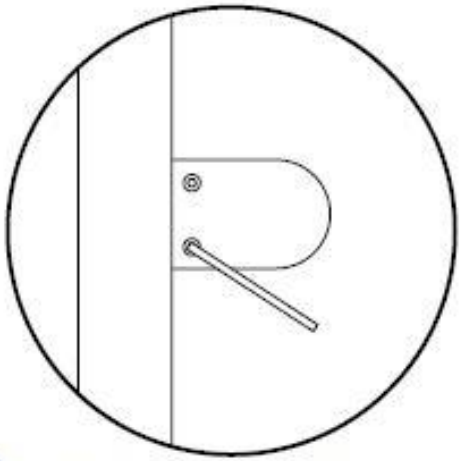

5 INSERT GLASS & TIGHTEN
PLACE GLASS INTO POSITION & TIGHTEN THE SECOND HALF OF THE D CLAMP

...finished!